



INSTALLATION MANUAL

Packaged water-cooled water chillers

EWWP045KAW1M
EWWP055KAW1M
EWWP065KAW1M

ECB2MUAW
ECB3MUAW

CE - DECLARATION-OF-COMPATIBILITY
CE - KONFORMITÄTSERKÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΟΣΗΣ

CE - DECLARACÃO-DE-CONFORMIDADE
CE - ЗАРЯБІЕННІЕ-О-СОУПЕТВЕТСТВИ
CE - ОПФЯЛДЭСЕРКЛЕРІNG
CE - FÖRSÄKRAN-OM-ÖVERENSSTÄMMELSE

CE - ERKLÆRING OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUDESTA
CE - DEKLARACJA-ZGODNOŚCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA-O-USKLADENOSTI
CE - MEGFELELŐSÉG-NYILATKOZAT
CE - DEKLARACIJA-ZGODNOSTI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA-O-SKLADNOSTI
CE - VASTAVUSDEKLARACIJA
CE - ATBILSTĪBAS-DEKLARĀCIJA
CE - VYHLÁSENIE-ZHODY
CE - UYUMLUK-BİLDİRİSİ

Daikin Europe N.V.

- 01 **(GB)** declares under its sole responsibility that the air conditioning models to which this declaration relates:
- 02 **(D)** erklärt auf seine alleinige Verantwortung daß die Modelle der Klimageräte für die diese Erklärung bestimmt ist:
- 03 **(F)** déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
- 04 **(NL)** verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
- 05 **(E)** declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
- 06 **(I)** dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
- 07 **(GR)** δηλώνει με αποκλειστική της ευθύνη ότι το προϊόν της κλιματιστικής συσκευής στο οποίο αναφέρεται η παρούσα δήλωση:
- 08 **(C)** declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

EWWP045KAW1M***, EWWP055KAW1M***, EWWP065KAW1M***,
ECB2MUAW, ECB3MUAW, Z
*, **, 1, 2, 3, ..., 9, A, B, C, ..., Z

- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
- 02 der/den folgenden Norm(en) oder einen anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:
- 03 sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
- 04 conform de volgerde norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
- 05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
- 06 sono conformi all(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
- 07 είναι σύμφωνα με το(ι) ακόλουθό(ι) πρότυπο(ι) ή άλλο(ν) έγγραφο(ι) κανονιστικό(ν), υπό την προϋπόθεση ότι χρησιμοποιούσ(α) σύμφωνα με τις οδηγίες μας:
- 08 **(CZ)** je v souladu s následujícími normami nebo normativními dokumenty:
- 09 в соответствии с нижеследующими:
- 10 under iagttagelse at bestemmelserne i:
- 11 enligt villkoren i:
- 12 gilt i henhold til bestemmelserne i:
- 21 cizjedatki krajvarje na:
- 22 noudatien määräyksä:
- 23 laskatien suostus, paleikam;
- 14 za dodržení ustanovení předpisu:
- 15 prema odredbama:
- 16 kovelai al:
- 17 zgodnie z postanowieniami Dyrektyw:
- 18 in urma prevederilor:

- 01 **Note** * as set out in <A> and judged positively by
- 02 **Hinweis** * wie in der <A> aufgeführt und von positiv beurteilt gemäß Zertifikat <C>.
- 03 **Remarque** * tel que défini dans <A> et évalué positivement par conformément au Certificat <C>.
- 04 **Bemerk** * zoals vermeld in <A> en positief beoordeeld door overeenkomstig Certificaat <C>.
- 05 **Nota** * como se establece en <A> y es valorado positivamente por de acuerdo con el Certificado <C>.
- 06 **Nota** *
- 07 **Зна́чення** *
- 08 **Nota** *
- 09 **Примечание** *
- 10 **Bemærk** *

01** Daikin Europe N.V. is authorised to compile the Technical Construction File.

02** Daikin Europe N.V. hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.

03** Daikin Europe N.V. est autorisé à compiler le Dossier de Construction Technique.

04** Daikin Europe N.V. is bevoegd om het Technisch Constructiedossier samen te stellen.

05** Daikin Europe N.V. está autorizado a compilar el Archivo de Construcción Técnica.

06** Daikin Europe N.V. è autorizzata a redigere il File Tecnico di Costruzione.

07** H Daikin Europe N.V. siva zbornopoljevo va ovuiziti: tov Teynikov ofikso ktroukovje.

08** A Daikin Europe N.V. esta autorizata a compilar a documentatia tehnica de fabrica.

09** Kowania Daikin Europe N.V. umowoczenia zostawiam Komitet techniczny/oi dokumy nauki.

10** Daikin Europe N.V. er autoriseret til at udarbejde de tekniske konstruktionsdata.

11** Daikin Europe N.V. är bemyndigade att sammanställa den tekniske konstruktionsfilen.

12** Daikin Europe N.V. har tillatelse til å kompilere den Tekniske konstruktionsfilen.

08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:

09 соответствует следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:

10 verduchden volgende standaard(en) eller andere/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instruer:

11 respektive uttushing á rttíð i óverensstæmmelse med och följér följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämelse med våra instruktioner:

12 respektive uslyr er i óverensstæmmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning at disse bruges i henhold til våre instrukser:

13 vastavaet searaveien standardien ja muiden ohjeellisten dokumenttien vastimukissa edellytettien, että niitä käytetään ohjeidemme mukaisesti:

14 za předpokladu, že jsou využívány v souladu s našimi pokyny, odpovídá následujícím normám nebo normativním dokumentům:

15 u skladu sa slijedećim standardom(na) ili drugim normativnim dokumentom(na), uz uvjet da se oni koriste u skladu s našim uputama:

Machinery 2006/42/EC ** Electromagnetic Compatibility 2004/108/EC *

- 11 **Information** * enligt <A> och godkänns av enligt Certifikat <C>.
- 12 **Merk** * som det fremkommer i <A> og gennem positiv bedømmelse av ifølge Serifikat <C>.
- 13 **Huom** * jotta on esitetty aseläytössä <A> ja jotta on hyväksynyt Serifikatissa <C> mukaisesti.
- 14 **Poznámk** * jak bylo uvedeno v <A> a pozitivně zjiřeno v souladu s osvědčením <C>.
- 15 **Naomena** * kako je izloženo u <A> pozitivno ođeno od strane prema Certifikatu <C>.
- 16 **Megjegyzés** * a(z) <A> alapján, a(z) igazolta a megjelölt, a(z) <C> tanúsítvány szerint.
- 17 **Uwaga** * zgodnie z dokumentacją <A> pozytywną opinią Swiadectwem <C>.
- 18 **Nota** * așa cum este stabilit în <A> și aprobat pozitiv de în conformitate cu Certificat <C>.
- 19 **Opomba** * kolje doobeno v <A> n odobeno s strani v skladu s osvedenim <C>.
- 20 **Märkus** * nagu on nähtud dokumentis <A> ja heaks kiidetud järgi vastaval serifikaadile <C>.
- 21 **Zaobeznka** * kako je iskazeno u <A> i oceneno pozitivno od sukladno Certifikatu <C>.
- 22 **Pastaba** * kaip nusavyta <A> ir kaip begiamia nusvyeta pagal Serifikatą <C>.
- 23 **Peznmes** * kā norādīts <A> un atbilstoš pozitīvajam vērtējumam saskaņā ar serifikātu <C>.
- 24 **Poznámka** * ako bolo uvedené v <A> a pozitívne zistené v súlade s osvedčením <C>.
- 25 **Not** * <A> da beritlogi gbi ve <C> Serifikatsina gře tairindan olumu olark deđerendirdigi gbi.

13** Daikin Europe N.V. on valitud loomaleadmis tehnikas aseltajvan.

14** Spoleenost Daikin Europe N.V. na opravnem ke kompleksu soboru tehnicke konstrukce.

15** Daikin Europe N.V. je ovlašten za izradu Datkeke o tehničkoj konstrukciji.

16** A Daikin Europe N.V. jogsutli a mészak konstrukciós dokumentáció összeállítására.

17** Daikin Europe N.V. ma upowaznienie do zbierania i opracowywania dokumentacji konstrukcyjnej.

18** Daikin Europe N.V. este autorizată să compileze Dosarul tehnic de construcție.

16 megjelölnek az alábbi szabvány(ok)nak vagy egyéb irányuló dokumentum(ok)nak, ha azokat előírás szerint használják:

17 spełniają wymogi następujących norm i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami:

18 sunt în conformitate cu următorul (următoare) standard(e) sau al(e) document(e) normative, cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre:

19 skladu z naslednjimi standardi in drugimi normativi, pod pogojem, da se uporabljajo v skladu z našimi navodili:

20 on vastavus järgmistele standarditele ja või teiste normatiivse dokumentidega, kui need kasutatakse vastavalt meie juhenditele:

21 съответстват на следните стандарти или други нормативни документи, при условие, че се използват съгласно нашите инструкции:

22 alllinka žemiam nurodylus standartus ir (arba) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus:

23 tad, ja leidoti atbilstošā norādījumam, abtiek sekojošiem standartiem un citiem normatīviem dokumentiem:

24 su v zbroe z naslednjimi (njimi) normo(na)mi) alebo inými (normatívnymi) dokumentom(na)mi, za predpokladu, že sa používajú v súlade s našimi návodmi:

25 ürtin, lallmallarmi za göre kulanimasi koşulluyla aşağıdaki standartlar ve norm belirlen belgelerle uyumludur:

- 10 Direktiv, med senere ændringer.
- 11 Direktiv, med foretagne ændringer.
- 12 Direktiv, med betratte endringer.
- 13 Direktiv, salasina kuin ne ovat muuttelutina.
- 14 v platām zskāt.
- 15 Snemiena, kako je izmijenjeno.
- 16 ranyev(e)k is modotilask rendelezésait.
- 17 z poznejšími popravkami.
- 18 Direktivelor, cu amendamentele respective.
- 19 Direktive, med senere ændringer.
- 20 Direktiv, med foretagne ændringer.
- 21 Директиви, с твренне именованя.
- 22 Direktivose su papildinymais.
- 23 Direktīvas un to papildinājums.
- 24 Snemiena, kako je izmijenjeno.
- 25 Degisirimis haleriyle Yonetmeliker.

<A>	DAIKIN.TCF.012H/04-2010
	KEIMA (NB0344)
<C>	63329-KRQ/ECM96-5256

19** Daikin Europe N.V. je podbišten za sestavo datkeke s tehnicno mapo.

20** Daikin Europe N.V. on valitud loomaleadmis tehnikas dokumentatsiooni.

21** Daikin Europe N.V. er ovgrawapana da oetram Akta za tehnickeja konstrukciju.

22** Daikin Europe N.V. yra įgalioja sudaryti iš techniskos konstrukcijos failą.

23** Daikin Europe N.V. ir autorizats sudaryti technisko dokumentaciją.

24** Spoločnosť Daikin Europe N.V. je oprávnená vytvoriť súbor technickej konštrukcie.

25** Daikin Europe N.V. teknik yapı Dosyasini derleneye yetkilidir.

DAIKIN

Jean-Pierre Beuselink
General Manager
Ostend, 1st of July 2010

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

3PW61842-5

CONTENTS

	Page
Introduction.....	1
Technical specifications	1
Electrical specifications.....	1
Options and features.....	1
Operation range.....	2
Main components	2
Selection of location	2
Inspecting and handling the unit.....	2
Unpacking and placing the unit	2
Important information regarding the refrigerant used	2
Checking the water circuit.....	2
Water quality specifications	3
Connecting the water circuit	3
Water charge, flow and quality	3
Piping insulation	3
Field wiring	3
Installing the control box (ECB* MUAW)	3
Parts table.....	3
Power circuit and cable requirements	3
Connection of the water-cooled water chiller power supply	4
Point for attention regarding quality of the public electric power supply.....	4
Interconnection cables	4
Before starting	4
How to continue	4

Thank you for purchasing this Daikin air conditioner.



READ THIS MANUAL ATTENTIVELY BEFORE STARTING UP THE UNIT. DO NOT THROW IT AWAY. KEEP IT IN YOUR FILES FOR FUTURE REFERENCE.

IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORT-CIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL.

IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DAIKIN DEALER FOR ADVICE AND INFORMATION.

The English text is the original instruction. Other languages are translations of the original instructions.

INTRODUCTION

The Daikin EWWP-KA packaged water-cooled water chillers are designed for indoor installation and used for cooling and/or heating applications. The units are available in 11 standard sizes with nominal cooling capacities ranging from 86 to 195 kW.

The EWWP units can be combined with Daikin fan coil units or air handling units for air conditioning purposes. They can also be used for supplying chilled water for process cooling.

The present installation manual describes the procedures for unpacking, installing and connecting the EWWP units.

Technical specifications⁽¹⁾

Hp	=	unit	+	controlbox
32 Hp		2x EWWP045KAW1M		ECB2MUAW
36 Hp		1x EWWP045KAW1M+ 1x EWWP055KAW1M		ECB2MUAW
40 Hp		2x EWWP055KAW1M		ECB2MUAW
44 Hp		1x EWWP055KAW1M+ 1x EWWP065KAW1M		ECB2MUAW
48 Hp		2x EWWP065KAW1M		ECB2MUAW
52 Hp		2x EWWP045KAW1M+ 1x EWWP055KAW1M		ECB3MUAW
56 Hp		1x EWWP045KAW1M+ 2x EWWP055KAW1M		ECB3MUAW
60 Hp		3x EWWP055KAW1M		ECB3MUAW
64 Hp		2x EWWP055KAW1M+ 1x EWWP065KAW1M		ECB3MUAW
68 Hp		1x EWWP055KAW1M+ 2x EWWP065KAW1M		ECB3MUAW
72 Hp		3x EWWP065KAW1M		ECB3MUAW

Hp		32	36	40	44	48
Dimensions HxWxD	(mm)	1200x600x1200				
Machine weight	(kg)	600	620	640	654	668
Connections						
• chilled water inlet and outlet	(inch)	2x FBSP 1.5				
• condenser water inlet and outlet	(inch)	2x FBSP 1.5				

Hp		52	56	60	64	68	72
Dimensions HxWxD	(mm)	1800x600x1200					
Machine weight	(kg)	920	940	960	974	988	1002
Connections							
• chilled water inlet and outlet	(inch)	3x FBSP 1.5					
• condenser water inlet and outlet	(inch)	3x FBSP 1.5					

Electrical specifications⁽¹⁾

Hp		32~72
Power circuit		
• Phase		3N~
• Frequency	(Hz)	50
• Voltage	(V)	400
• Voltage tolerance	(%)	±10

Options and features⁽¹⁾

Options


- Glycol application for leaving evaporator water down to -10°C or -5°C
- Low noise operation kit (field installation)

Features

- Voltage free contacts
 - general operation/pumpcontact
 - alarm
- Remote inputs
 - remote start/stop
 - remote change-over cooling/heating

(1) Refer to the operation manual or engineering data book for the complete list of specifications, options and features.

OPERATION RANGE

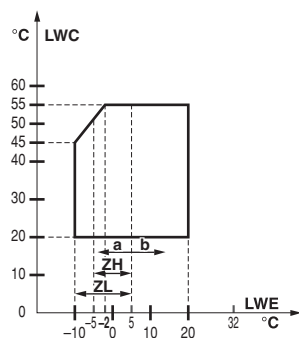

LWC	Leaving water temperature condenser
LWE	Leaving water temperature evaporator
a	Glycol
b	Water
	Continuous operation range

MAIN COMPONENTS (refer to the outlook diagram supplied with the unit)

- 1 Compressor
- 2 Evaporator
- 3 Condenser
- 4 Switchbox
- 5 Chilled water in
- 6 Chilled water out
- 7 Condenser water out
- 8 Condenser water in
- 9 Evaporator entering water temperature sensor
- 10 Freeze-up sensor
- 11 Condenser entering water temperature sensor
- 12 Digital display controller
- 13 Power supply intake

SELECTION OF LOCATION

The units are designed for indoor installation and should be installed in a location that meets the following requirements:

- 1 The foundation is strong enough to support the weight of the unit and the floor is flat to prevent vibration and noise generation.
- 2 The space around the unit is adequate for servicing.
- 3 There is no danger of fire due to leakage of inflammable gas.
- 4 Select the location of the unit in such a way that the sound generated by the unit does not disturb anyone.
- 5 Ensure that water cannot cause any damage to the location in case it drips out of the unit.

The equipment is not intended for use in a potentially explosive atmosphere.

INSPECTING AND HANDLING THE UNIT

At delivery, the unit should be checked and any damage should be reported immediately to the carrier claims agent.

UNPACKING AND PLACING THE UNIT

- 1 Cut the straps and remove the cardboard box from the unit.
- 2 Remove the four screws fixing the unit to the pallet.
- 3 Level the unit in both directions with the lifting lugs which are delivered with the control box (ECB*MUAW).
- 4 Use four anchor bolts with M8 thread to fix the unit in concrete (directly or using the floor standing supports).

IMPORTANT INFORMATION REGARDING THE REFRIGERANT USED

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

Refrigerant type: R407C

GWP⁽¹⁾ value: 1652.5

⁽¹⁾ GWP = global warming potential

The refrigerant quantity is indicated on the unit name plate.

CHECKING THE WATER CIRCUIT

The units are equipped with water inlets and water outlets for connection to a chilled water circuit and to a hot water circuit. These circuits must be provided by a licensed technician and must comply with all relevant European and national regulations.



The unit is only to be used in a closed water system. Application in an open water circuit can lead to excessive corrosion of the water piping.

Before continuing the installation of the unit, check the following points:

- 1 A circulation pump must be provided in such a way that it discharges the water directly into the heat exchanger.
- 2 A flow switch must be installed in the water outlet pipe to prevent the unit from operating at a water flow which is too low. A terminal is provided in the switch box for the electrical connection of the flow switch.
- 3 A wire mesh strainer (<1 mm) must be installed at the pump suction as to protect the pump and the heat exchanger from foreign matter.
- 4 Drain taps must be provided at all low points of the system to permit complete drainage of the circuit during maintenance or in case of shut down.
- 5 Air vents must be provided at all high points of the system. The vents should be located at points which are easily accessible for servicing.
- 6 Shut-off valves should be provided at the unit so that normal servicing can be accomplished without draining the system.
- 7 Vibration eliminators in all water piping connected to the chiller are recommended to avoid straining the piping and transmitting vibration and noise.

WATER QUALITY SPECIFICATIONS

		evaporator water		condenser water		tendency if out of criteria
		circulating water [<20°C]	supply water	circulating water [20°C-60°C]	supply water	
Items to be controlled						
pH	at 25°C	6.8~8.0	6.8~8.0	7.0~8.0	7.0~8.0	A + B
Electrical conductivity	[mS/m] at 25°C	<40	<30	<30	<30	A + B
Chloride ion	[mg Cl ⁻ /l]	<50	<50	<50	<50	A
Sulfate ion	[mg SO ₄ ²⁻ /l]	<50	<50	<50	<50	A
M-alkalinity (pH 4.8)	[mg CaCO ₃ /l]	<50	<50	<50	<50	B
Total hardness	[mg CaCO ₃ /l]	<70	<70	<70	<70	B
Calcium hardness	[mg CaCO ₃ /l]	<50	<50	<50	<50	B
Silica ion	[mg SiO ₂ /l]	<30	<30	<30	<30	B
Items to be referred to						
Iron	[mg Fe/l]	<1.0	<0.3	<1.0	<0.3	A + B
Copper	[mg Cu/l]	<1.0	<0.1	<1.0	<0.1	A
Sulfide ion	[mg S ²⁻ /l]	not detectable				A
Ammonium ion	[mg NH ₄ ⁺ /l]	<1.0	<0.1	<0.3	<0.1	A
Remaining chloride	[mg Cl/l]	<0.3	<0.3	<0.25	<0.3	A
Free carbide	[mg CO ₂ /l]	<4.0	<4.0	<0.4	<4.0	A
Stability index		—	—	—	—	A + B

A = corrosion

B = scale

CONNECTING THE WATER CIRCUIT

The evaporator and condenser are foreseen of GAS male pipe thread for the water inlet and outlet (refer to the outlook diagram). Evaporator and condenser water connections are to be made in accordance with the outlook diagram, respecting the water in- and outlet.

If air, moisture or dust gets in the water circuit, problems may occur. Therefore, always take into account the following when connecting the water circuit:

1. Use clean pipes only.
2. Hold the pipe end downwards when removing burrs.
3. Cover the pipe end when inserting it through a wall so that no dust and dirt enter.

WATER CHARGE, FLOW AND QUALITY

To assure proper operation of the unit a minimum water volume is required in the system and the water flow through the evaporator must be within the operation range as specified in the table below.

	Minimum water volume (l)	Minimum water flow	Maximum water flow
32 Hp	205	123 l/min	493 l/min
36 Hp	268	142 l/min	568 l/min
40 Hp	268	161 l/min	642 l/min
44 Hp	311	173 l/min	694 l/min
48 Hp	311	186 l/min	745 l/min
52 Hp	205	204 l/min	814 l/min
56 Hp	205	222 l/min	889 l/min
60 Hp	268	241 l/min	963 l/min
64 Hp	268	254 l/min	1015 l/min
68 Hp	268	267 l/min	1066 l/min
72 Hp	311	280 l/min	1118 l/min



The water pressure should not exceed the maximum working pressure of 10 bar.

NOTE



Provide adequate safeguards in the water circuit to make sure that the water pressure will never exceed the maximum allowable working pressure.

PIPING INSULATION

The complete water circuit, inclusive all piping, must be insulated to prevent condensation and reduction of the cooling capacity.

Protect the water piping against water freezing during winter period (e.g. by using a glycol solution or heatertape).

FIELD WIRING



All field wiring and components must be installed by a licensed electrician and must comply with relevant European and national regulations.

The field wiring must be carried out in accordance with the wiring diagram supplied with the unit and the instructions given below.

Be sure to use a dedicated power circuit. Never use a power supply shared by another appliance.

Installing the control box (ECB* MUAW)

Follow instructions in "Annex" (32~72 Hp) at the very end of this manual when installing the control box into the unit.

Parts table

F1,2,3U		Main fuses for the unit
H1P		Indication lamp alarm
H3P		Indication lamp operation compressor
PE		Main earth terminal
S7S		Remote cooling/heating change-over valve
S9S		Remote start/stop switch
S10L		Flowswitch
S11L		Contact that closes if the pump is working
S12S		Main isolator switch
- - -		Field wiring

Power circuit and cable requirements

- 1 The electrical power supply to the unit should be arranged so that it can be switched on or off independently of the electrical supply to other items of the plant and equipment in general.
- 2 A power circuit must be provided for connection of the unit. This circuit must be protected with the required safety devices, i.e. a circuit breaker, a slow blow fuse on each phase and an earth leak detector. Recommended fuses are mentioned on the wiring diagram supplied with the unit.



Switch off the main isolator switch before making any connections (switch off the circuit breaker, remove or switch off the fuses).

Connection of the water-cooled water chiller power supply

- 1 Using the appropriate cable, connect the power circuit to the N, L1, L2 and L3 terminals of the unit.
- 2 Connect the earth conductor (yellow/green) to the earthing terminal PE.

Point for attention regarding quality of the public electric power supply

- This equipment complies with EN/IEC 61000-3-11⁽¹⁾ provided that the system impedance Z_{sys} is less than or equal to Z_{max} at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a system impedance Z_{sys} less than or equal to Z_{max} .

	Z_{max} (Ω)
EWWP045	0.22
EWWP055	0.21
EWWP065	0.20

- Only for 32~40 Hp: Equipment complying with EN/IEC 61000-3-12⁽²⁾

Interconnection cables

- In addition to the power supply cable, a cable must be provided for the connection of the flow switch.
Be sure to interlock so, that the compressor will not come into operation unless the waterpump is operated. For this purpose 2 spare terminals are provided in the switch box. Refer to the wiring diagram supplied with the unit.
- Voltage free contacts
The controller is provided with some voltage free contacts to indicate the status of the unit. These voltage free contacts can be wired as described on the wiring diagram.
- Remote inputs
Besides the voltage free contacts, there are also possibilities to install remote inputs.
They can be installed as shown on the wiring diagram.

BEFORE STARTING



The unit should not be started, not even for a very short period of time, before the following pre-commissioning checklist is filled out completely.

tick ✓ when checked	standard steps to go through before starting the unit
☐	1 Check for external damage .
☐	2 Install main fuses , earth leak detector and main switch . Recommended fuses: aM according to IEC standard 269-2. <i>Refer to the wiring diagram for size.</i>
☐	3 Supply the main voltage and check if it is within the allowable $\pm 10\%$ limits of the nameplate rating. The electrical main power supply should be arranged so, that it can be switched on or off independently of the electrical supply to other items of the plant and equipment in general. <i>Refer to the wiring diagram, terminals N, L1, L2 and L3.</i>
☐	4 Supply water to the evaporator and verify if waterflow is within the limits as given in the table under " Water charge, flow and quality " on page 3
☐	5 The piping should be completely purged . See also chapter " Checking the water circuit " on page 2
☐	6 Connect the flowswitch and pumpcontact in series, so that the unit can only come in operation when the waterpumps are running and the waterflow is sufficient.
☐	7 Connect the optional field wiring for pumps start-stop .
☐	8 Connect the optional field wiring for remote control .

NOTE



- Try to reduce the drilling in the unit to a minimum. If drilling is imprevmentable, remove the iron filling thoroughly in order to prevent surface rust!
- It is necessary to read the operation manual delivered with the unit before operating the unit. It will contribute to understand the operation of the unit and its electronic controller.
- Verify on the wiring diagram all electrical actions mentioned above, in order to understand the operation of the unit more deeply.
- Close all switch box doors after installation of the unit.

I do confirm having executed and checked all the above mentioned items.

Date

Signature

Keep for future reference.

HOW TO CONTINUE

After installation and connection of the packaged water-cooled water chiller, the complete system should be checked and tested as described in "Checks before initial start-up" in the operation manual supplied with the unit.

Fill out the brief operation instructions form and fix it visibly near the operating site of the refrigeration system.

(1) European/International Technical Standard setting the limits for voltage changes, voltage fluctuations and flicker in public low-voltage supply systems for equipment with rated current ≤ 75 A.
(2) European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current > 16 A and ≤ 75 A per phase.

BRIEF OPERATION INSTRUCTIONS

EWWP-KA Packaged water-cooled water chiller

Equipment supplier :

.....

Service department :

.....

Phone :

Phone :

EQUIPMENT TECHNICAL DATA

Manufacturer	: DAIKIN EUROPE	Power supply (V/Ph/Hz/A)	:
Model	:	Maximum high pressure	:31 bar
Serial Number	:	Charging weight (kg) R407C	:
Year of construction	:		

START-UP AND SHUT DOWN

- Start-up by switching on the circuit breaker of the power circuit. The operation of the water chiller is then controlled by the Digital Display Controller.
- Shut-down by switching off the controller and the circuit breaker of the power circuit.



WARNINGS

Emergency shut down : Switch off the **circuit breaker** located on

Air inlet and outlet : Always keep the air inlet and outlet free to obtain the maximum cooling capacity and to prevent damage to the installation.

Refrigerant charge : Use refrigerant R407C only.

First aid : In case of injuries or accidents immediately inform:





➤ **Company management** : **Phone**



➤ **Emergency physician** : **Phone**

➤ **Fire service** : **Phone**




NOTES

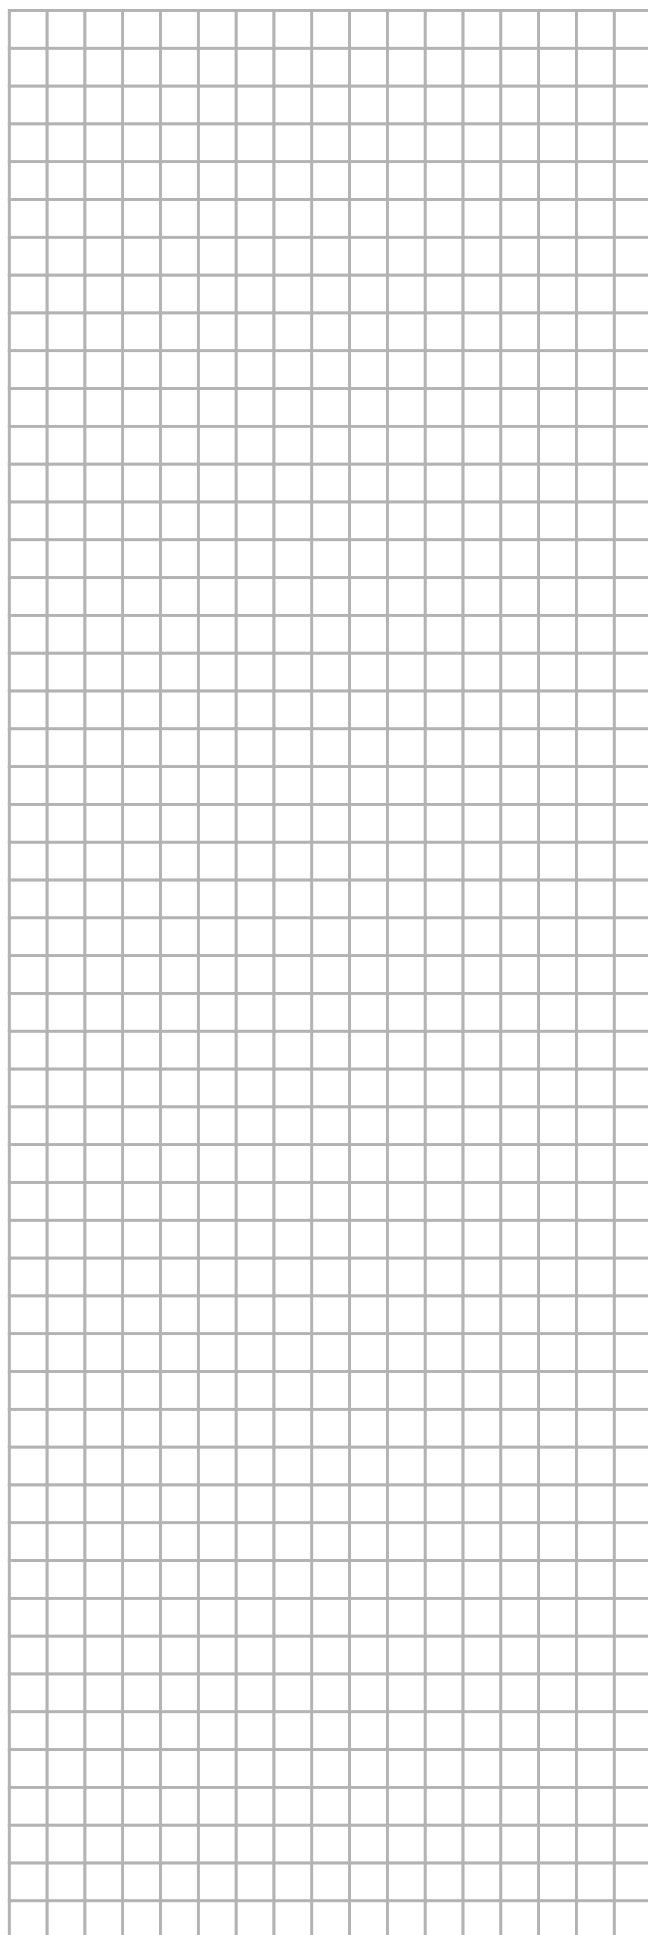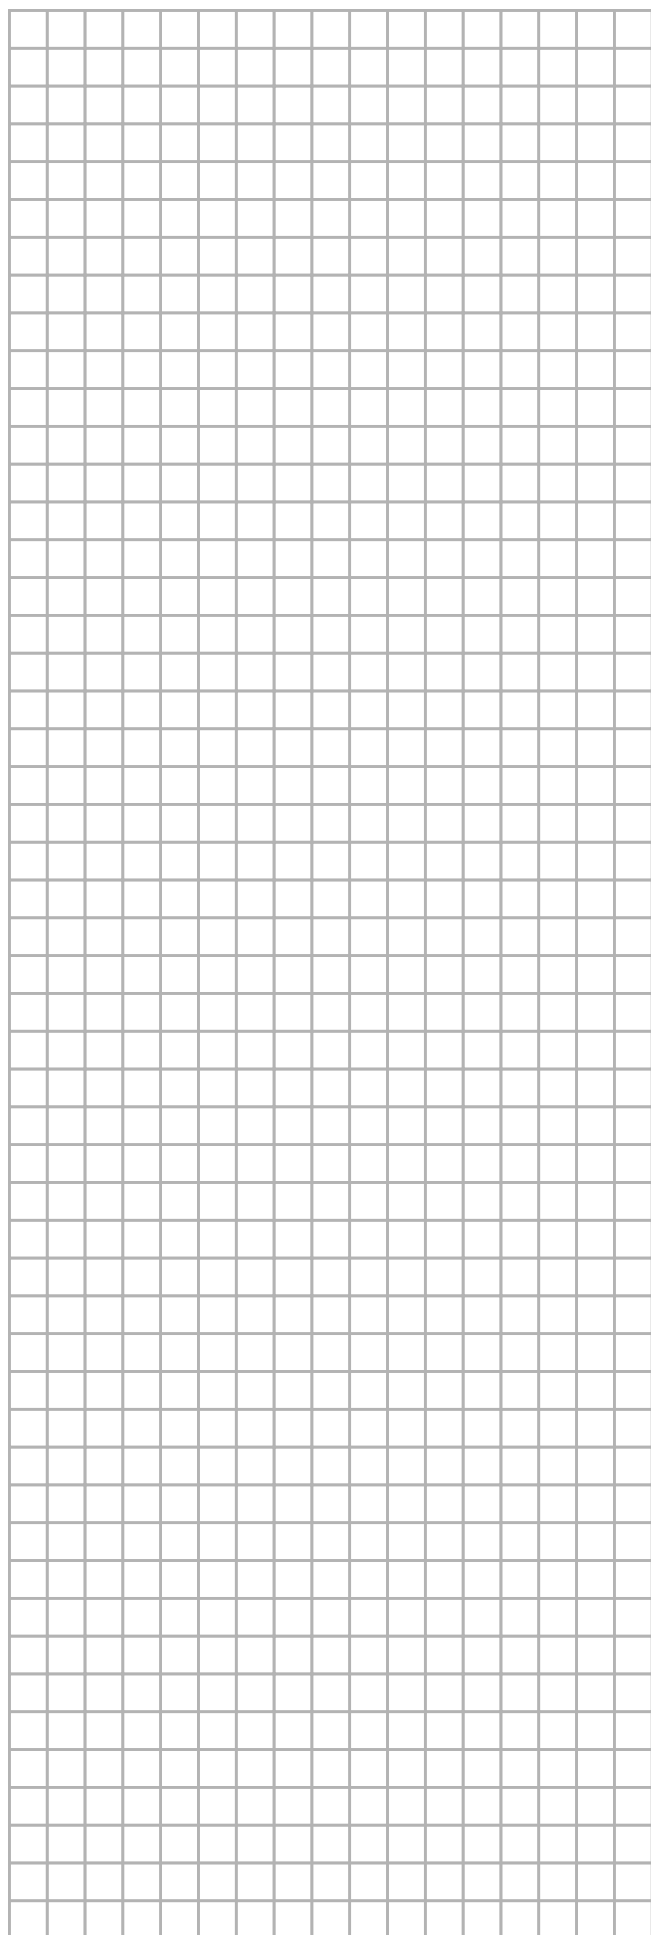

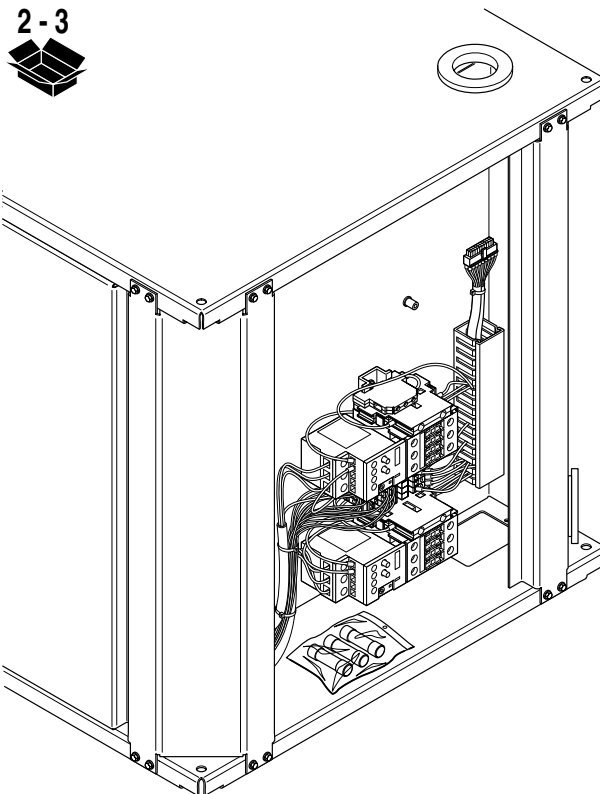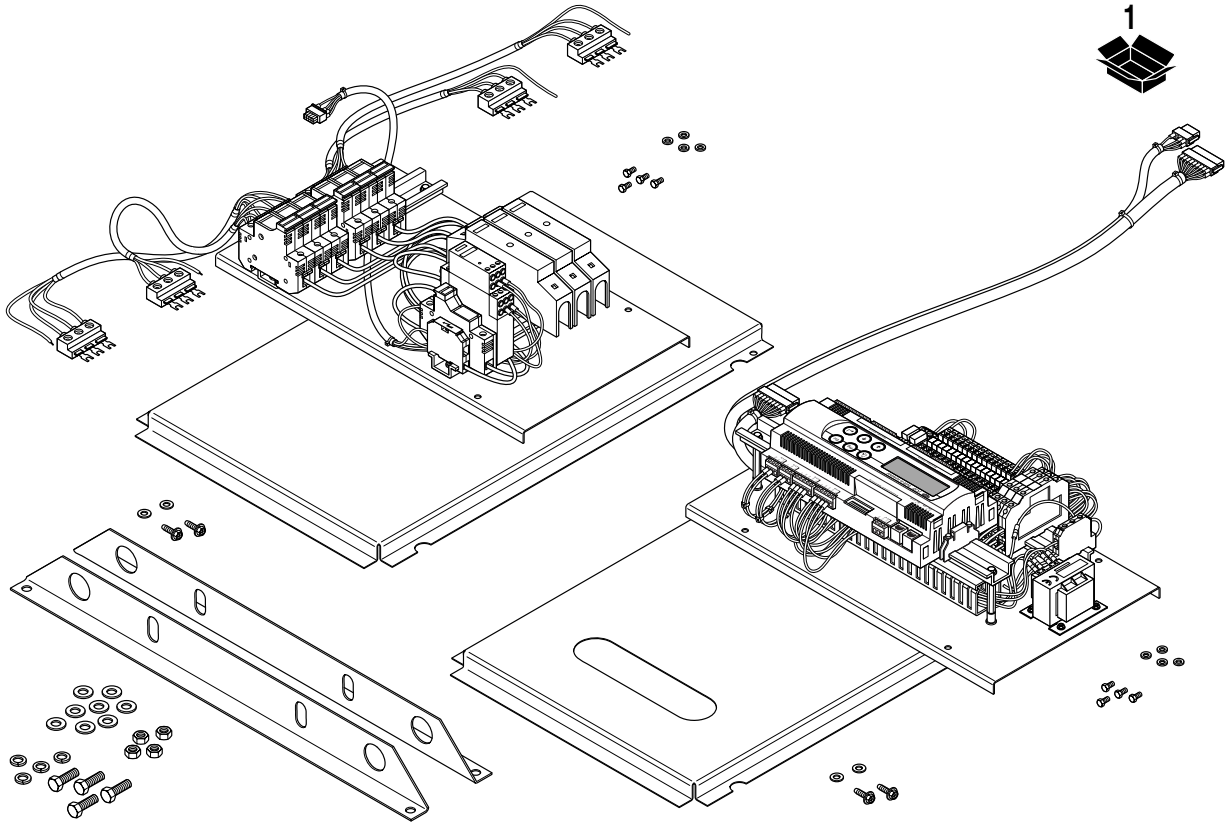

1

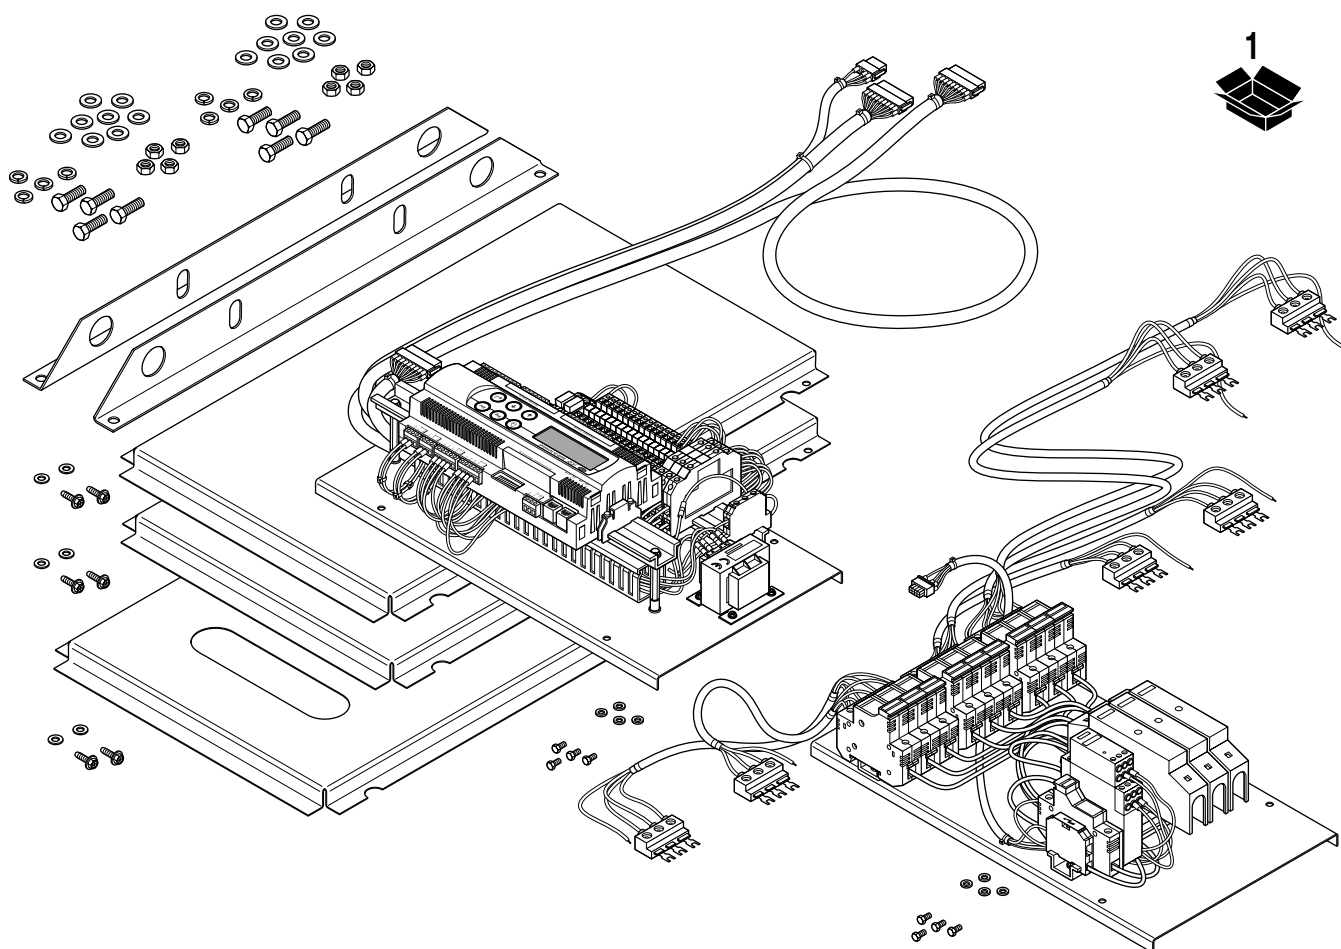2-3-4

